StreamTV EVO FORCE 1 REMOTE CONTROL

The Power Button turns the TV on and off, along with an external audio device, if programmed.

The Guide Button opens the StreamTV guide and will also open the StreamTV guide from any app.

The Volume Rocker turns the volume on the TV or audio device up or down, if programmed. If the remote is not programmed, it will control the internal set-top box volume.

The Mute Button silences the TV or audio device, if programmed.

The Select (Pause) Button selects an option or pauses a show or movie in StreamTV or other apps. It also functions as the play button when a video is paused.

The Navigational Buttons (outer circle) are used for navigation. The left side rewinds and the right side fast forwards in StreamTV or other apps.

The Back Button is used to go back to a menu.

The Last Button within StreamTV will take you to the last channel you were watching. Within other applications, it will exit the application and take you back to the app overlay screen.

The Netflix Button opens the Netflix application.



The Input Button changes inputs on the TV.

The Channel Rocker changes the channel up or down. It will also move the page up or down on the guide.

The TiVo Button opens the StreamTV main menu, and will bring you back to live TV from any application.

The Info Button provides information for shows or movies within StreamTV.

The DVR Button opens the DVR menu within StreamTV.

The Google Voice Button allows you to search by voice; does not always search within StreamTV.

The Apps Button opens the app overlay screen.

The Number Buttons are used to change the channel and enter in numbers when the keyboard is open on screen.



419.724.9800 • NW Ohio/SE Michigan 419.627.0800 • Erie County

To learn more, scan the QR code to watch helpful videos or visit BuckeyeBroadband. com/StreamTV

